

CHECK CREDIT DEBIT	Press Debit
SALE REFUND	Press Sale
DEBIT SALE SWIPE CARD	Swipe card on terminal or pin pad Debit card can't be manually keyed
DEBIT SALE ENTER AMOUNT \$0.00	Key amount and press Enter
TERMINAL MAY PROMPT: WAITING FOR TIP ENTRY ON PIN PAD WAITING FOR CASHBACK ENTRY ON PIN PAD	Key requested information on pin pad and press Enter
TOTAL \$0.00 ENTER PIN	Instruct customer to enter PIN via PIN pad and press Enter Do not ask customer for the PIN
DIALING	Terminal communicates with the host for approval
PRINT CUST RECEIPT? YES NO	Press Yes to print customer receipt
DEBIT SALE APPROVED 000000	Press Clear to return to idle prompt
ORCE SALE Use this function to co	apture transactions when voice approval has been obtained. Press Credit
SALE REFUND FORCE	Press Force
CREDIT FORCE SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
VISA FORCE SALE ENTER AMOUNT \$0.00	Key amount and press Enter
TERMINAL MAY PROMPT: TIP AMOUNT	Key tip amount and press Enter
ENTER AUTH CODE	Key authorization number that was obtained by the voice authorization center and press Enter
DIALING	Terminal communicates with the host for approval

Press Clear to return to idle prompt

REFUND Use this function to issue a	a credit to the cardholder's account for goods or services.
CHECK CREDIT DEBIT	Press Credit
SALE REFUND FORCE	Press Refund
CREDIT REFUND SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
<card type=""> REFUND ENTER AMOUNT \$0.00</card>	Key amount and press Enter
PRINT CUST RECEIPT YES NO	Press Yes to print customer receipt.
VISA REFUND APPROVED	Press Clear to return to idle prompt
	


AUTHORIZATION ONLY This proc	edure is to authorize a credit card transaction. This will not capture
in the terminal.	
CHECK CREDIT DEBIT	Press Credit
SALE REFUND FORCE BACK TIPS MORE	Press More
AUTH TABS CLOSE	Press Auth
AUTH ONLY SALE SWIPE CARD	Swipe card or manually key card number and press Enter
EXPIRE DATE MMYY	Key expiration date and press Enter
VISA AUTH ONLY ENTER AMOUNT \$0.00	Key amount and press Enter
DIALING	Terminal communicates with the host for approval
APPROVED #####	Press Clear to return to idle prompt


NO


######

YES

APPROVED

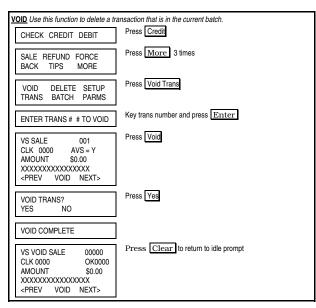

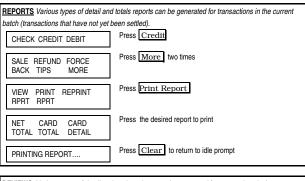

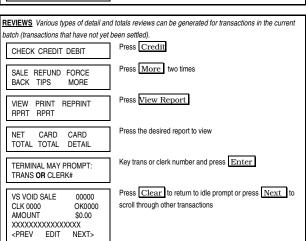

	of each day to settle the batch for payment and clear your termina cedures are only necessary if Auto Close is disabled.
CHECK CREDIT DEBIT	Press Credit
SALE REFUND FORCE BACK TIPS MORE	Press More
AUTH TABS CLOSE	Press Close
DIALING	Terminal communicates with the host for approval
BATCH CLOSE OKAY	Press Clear to return to idle prompt

FIRST DATA FD SERIES QUICK REFERENCE GUIDE



Retail {FDO1001}

VOICE AUTHORIZATION NUMBERS
MC/VS
AMEX
DISCOVER/NOVUS
OTHER
CUSTOMER SUPPORT

PROGRAMMING INFORMATION
Merchant Number
Merchant ID (MID)
Terminal ID (TID)
Download Telephone Number
Touch Tone or Rotary Dial